

Telephone: 1800 2784 7538 U218 354 eastern valley way Chatswood NSW 2067 AUSTRALIA Website: www.anser-u2.com.au E-mail: sales@inkjetprint.com.au

INK HANDLING

This is to ensure that the cartridges do not dry to reduce the damage.

It is imperative to replace the cap for any cartridge that is not in use for a period more than 5-10 minutes.

DO NOT LEAVE

A cartridge in printer or without a CAP!



Supplier takes no responsibility for damaged or dried out ink cartridges.

123456789 123456789

DO NOT DAMAGE

A cartridge hitting by products!



Supplier takes no responsibility for damaged or dried out ink cartridges.

123456789 120400108

DO NOT SHAKE

or drop a cartridge!



Supplier takes no responsibility for damaged or dried out ink cartridges.

123400/89 123456/89

After-use or when not in-use take out cartridge from the machine and put on the plastic cartridge capClip seal so the cartridge does not dry out

